

Mounting IR-LED


For paper air pistol target

Important

the IR LED must show directly straight to the shooter.
The function of the IR-LED can not be seen with the eye
You can make a photo, then they see the blue light

Important

The IR-LED and the battery must be used the right polarity (+/-)

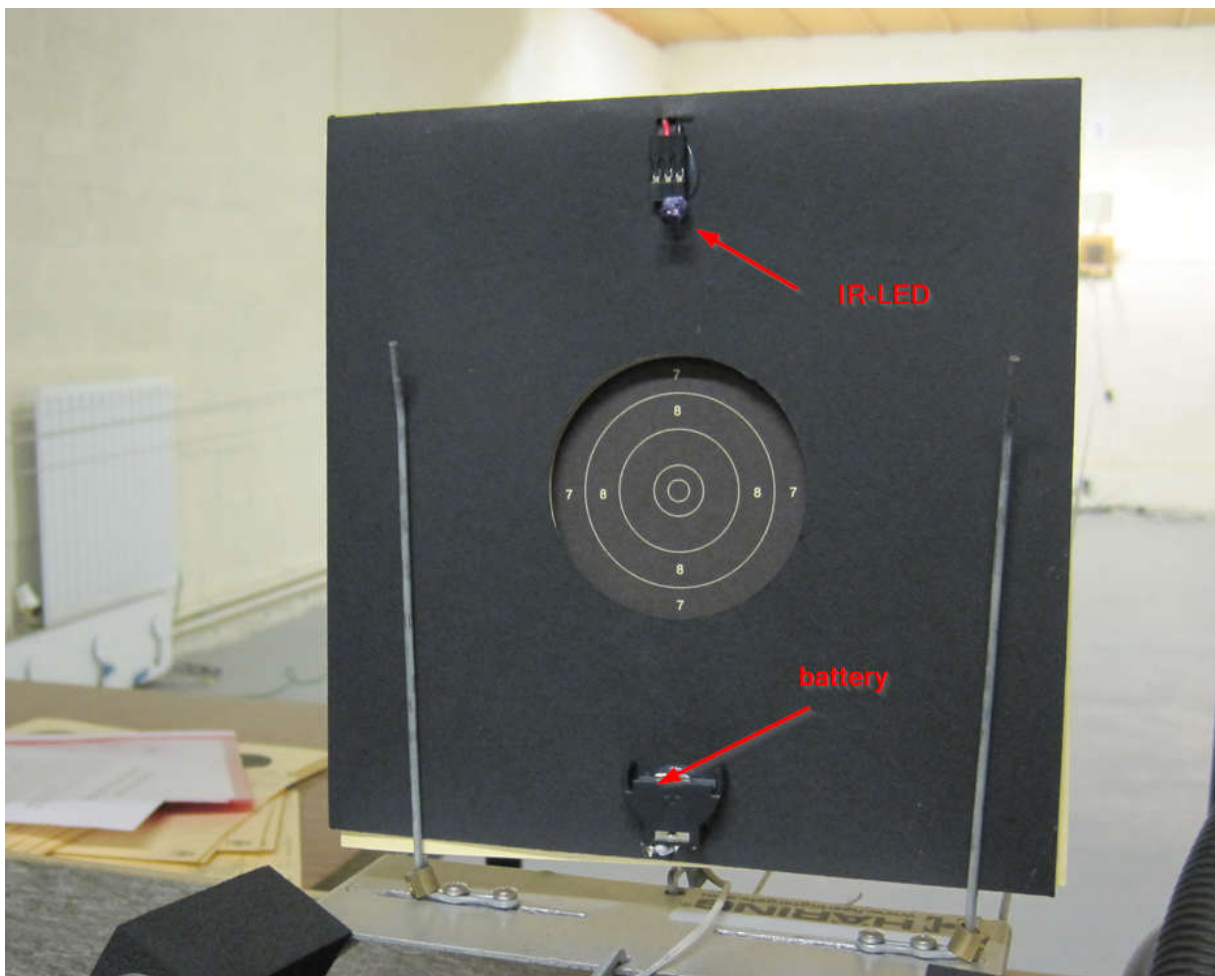

For Electronic target

The IR module is fitted with a double-sided tape or klett about 6cm above the center of the target. The battery pack provides power

The green LED indicates the function.

The transparent plate is air gun-shy

